

Table of contents

	Page
Introduction Use of this Manual	6
<hr/>	
Part 1 Digital Electronics module: Local Operation (Redundant)	
Local Unit Interface GUI	6
Local Input	6
LCD display local operation	6
Programming via the Local Unit Interface GUI	7
CR 8000 Switching Point Setup	17
RF 8000 Switching Point Setup	19
<hr/>	
Part 2 Digital Electronics module: Remote Operation via PROFIBUS PA	
START: PA	20
Hardware Device Description (HDD)	20
Bus Termination	20
Power Demand	20
Cyclic versus Acyclic Data	20
Transmission of user data via PROFIBUS PA	20
Notes	24
PROFIBUS PA Parameters	26
Mounting status	26
Function	26
Changing parameter settings	27
Filling level status	27
Station	27
State	27
Private Mode	27
Structure	27
Stop Indication / Peak Indication	27
Operating hours	27
Switch Point adjustment	27
Station Name	27
Lock	27
Power On	27
Display Status for local operation	28
<hr/>	
Technical Reference High Frequency Module	28

Subject to technical change
All dimensions in mm unless
stated otherwise

We assume no liability for copying errors.
Different versions than specified are possible.
Please contact our technical consultants.