

Manual ITM-51-CU

1. Application-oriented use

The ITM 51/51-gal is maintenance free. However, it is recommended to check the calibration of the turbidity sensor once a year. For this check the ITM 51-CU calibration check tool is recommended. With the solid state reference the stability can be checked. If a calibration is recommended the ITM 51 should be shipped back to Anderson-Negele.

2. Scope of delivery



ITM 51-CU cap

ITM 51-CU bottom



ITM 51-CU reference plate

The reference plate is placed in the ITM 51-CU bottom piece and therefore protected. The reference plate can be removed and turned to top or bottom depending on the process connection of the used ITM 51.