



# KARI Float Switch Operation *Manual*



**Float**

Large amounts of fluid.  
Discharging pump starts.



**Stop**

Lower level for discharging.  
Discharging pump stops.



Page 2/10  
Page 2/10