

Table of contents

| | Page |
|--|---|
| Getting started Technical support | 3 |
| Introduction | 3 |
| Applications | 4 |
| Technology | 5 |
| Fiber-optic | 5 |
| Electrical bus | 5 |
| Hybrid fiber | 5 |
| Synchronous switching | 5 |
| Traffic engineering | 5 |
| Hardware | 10 |
| Optics | 10 |
| Mounting | 10 |
| Electrical installation | 20 |
| Wiring | 20 |
| Network planning | 20 |
| Port configuration | 20 |
| Security - Remote control via the CommandView | 27 |
| Troubleshooting | 30 |
| References | 40 |
| Notes for you in this manual | 47 |
| Legend | 48 |
| Subject to technical change. All dimensions in mm unless stated otherwise. | We assume no liability for typing errors. Different conditions than specified are possible. Please contact our technical consultants. |