

Table of contents

	Page
Introduction Use of this Manual	6
<hr/>	
Part 1 Digital Electronics module: Local Operation (Stand-alone)	
Local User Interface (LUI)	6
Lead Inset	6
LCD display local operation	6
Programming via the Local User Interface (LUI)	7
CR 6000 Switching Point Setup	17
RF 6000 Switching Point Setup	19
<hr/>	
Part 2 Digital Electronics module: Remote Operation via PROFIBUS PA	
Quick Start	20
Electronic Device Description (EDD)	20
Bus Termination	20
Power Supplies	20
Cyclic versus Acyclic Data	20
Transmission of user data via PROFIBUS PA	20
Notes	20
PROFIBUS PA Parameters	20
Address Values	20
Parity	20
Cycling parameter settings	21
Timing limit status	21
Station	21
Stop	21
Transmit Mode	21
Transfer	21
Data Indication (Peak Indication)	21
Cycling mode	21
Station Point adjustment	21
Station Name	21
Link	21
Power On	21
Display Status for local operation	21
<hr/>	
Technical Reference High Frequency Module	22

Subject to technical change.
All dimensions in mm unless
stated.

We assume no liability for typing errors.
Different conditions than specified are possible.
Please contact our technical consultants.